

Rohnson[®]

TURBO CONVECTOR

USER INSTRUCTION



MODEL:R-084

This product is only suitable for well insulated spaces or occasional use.

TECHNICAL CHARACTERISTICS

STAND Convector heater with turbo and with thermostat

RATED POWER INPUT: 2000W


RATED VOLTAGE RANGE: AC 230V 50Hz

IMPORTANT

Read these instructions fully before using the heater. Retain these instructions for future reference.

ASSEMBLY OF THE HEATER

Before using the heater, the feet (supplied separately in the carton), must be fitted to the unit. These are to be attached to the base of the heater using the 4 self-tapping screws provided, taking care to ensure that they are located correctly in the bottom ends of the heater side mouldings

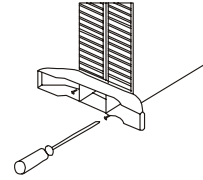


SAFETY INSTRUCTIONS (to be read before operating the heater)

1. Do not use the heater unless the feet are correctly attached.
2. Ensure the power supply to the socket into which the heater is plugged is in accordance with the rating label on the heater and that the socket is earthed.
3. Keep the power cord away from the hot body of the heater.
4. Warning: Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
5. Warning: In order to avoid overheating, do not cover the heater.
6. Indoor use only.
7. Do not place the heater on carpets having a very deep pile.
8. Always ensure that the heater is placed on a firm level surface.
9. Do not place the heater close to curtains or furniture in order to avoid a fire hazard.
10. Warning: heater must not be located immediately below a socket-outlet.
11. Do not insert any object through the heat outlet or air grilles of the heater.
12. Do not use the heater in areas where flammable liquids are stored or where flammable fumes may be present.
13. Always unplug the heater when moving it from one location to another.
14. Warning: If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
15. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

16. Children should be supervised to ensure that they do not play with the appliance.

OPERATION OF THE HEATER

NOTE: It is normal when the heaters are turned on for the first time or when they are turned on after having not been used for a long period of time the heaters may emit some smell and fumes. This will disappear when the heater has been on a short while.

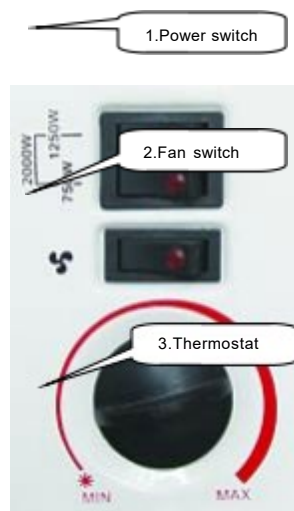

Convactor heater with thermostat and fan

Choose a suitable location for the heater, taking into account the safety instructions above.

Insert the plug of the heater into a suitable socket.

Turn the thermostat knob fully in a clockwise direction to the maximum setting. Turn on the heating elements by means of the rocker switches on the side panel.

When the heating elements are on the switches will illuminate. For maximum heat output both switches should be on.

When the desired room temperature has been reached, the thermostat knob

should be turned slowly anti-clockwise until the thermostat is heard to click off and the lights on the element switches are seen to go out. After this the heater will keep the air temperature in the room at the set temperature by switching on

and off automatically.

This model also incorporates an internal fan, which can be switched on independently of the heating elements.

Fan Operation: -This is operated by means of the switch with the fan symbol along side it. The fan will only operate with the thermostat in the “on” position and can be used when the heating elements are “on” to blow warm air into the room. In warm conditions the fan can be used with the heating elements “off” to blow cool air into the room.

CLEANING THE HEATER

Always un-plug the heater from the wall socket and allow it to cool down before cleaning.

Clean the outside of the heater by wiping with a damp cloth and buff with a dry cloth.

Do not use any detergents or abrasives and do not allow any water to enter the heater.

STORING THE HEATER

When the heater is not used for long periods of time it should be protected from dust and stored in a clean dry place.



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

Model identifier(s): R-084					
ITEM	SYMBOL	VALUE	UNIT	ITEM	UNIT
HEAT OUTPUT				TYPE OF HEAT INPUT, FOR ELECTRIC STORAGE LOCAL SPACE HEATERS ONLY (SELECT ONE)	
Nominal heat output	P_{nom}	2.0	kW	manual heat charge control, with integrated thermostat	NO
Minimum heat output(indicative)	P_{min}	1.0	kW	manual heat charge control with room and/or outdoor temperature feedback <input type="checkbox"/>	NO
Maximum continuous heat output	P	2.0	kW	electronic heat charge control with room and/or outdoor temperature feedback <input type="checkbox"/>	NO
AUXILIARY ELECTRICITY CONSUMPTION				fan assisted heat output	NO
At nominal heat	e_{lmax}	1.962	kW	TYPE OF HEAT OUTPUT/ROOM TEMPERATURE CONTROL	
At minimum heat output	e_{lmin}	0.971	kW	single stage heat output and no room temperature control <input type="checkbox"/> <input type="checkbox"/>	NO
In standby mode	e_{lSB}	N/A	kW	Two or more manual stages, no room temperature control <input type="checkbox"/> <input type="checkbox"/>	NO
				with mechanic thermostat room temperature control <input type="checkbox"/> <input type="checkbox"/>	YES
Seasonal space heating energy efficiency	η_s	N/A		with electronic room temperature control <input type="checkbox"/> <input type="checkbox"/>	NO
				electronic room temperature control plus daytimer <input type="checkbox"/> <input type="checkbox"/>	NO
				electronic room temperature control plus week timer <input type="checkbox"/> <input type="checkbox"/>	N
OTHER CONTROL OPTIONS (MULTIPLE SELECTIONS POSSIBLE) <input type="checkbox"/> <input type="checkbox"/>					
				room temperature control, with presence detection <input type="checkbox"/> <input type="checkbox"/>	NO
				room temperature control, with open window detection <input type="checkbox"/> <input type="checkbox"/>	NO
				with distance control option <input type="checkbox"/> <input type="checkbox"/>	NO
				with adaptive start control <input type="checkbox"/>	NO
				with working time limitation <input type="checkbox"/> <input type="checkbox"/>	NO
				with black bulb sensor <input type="checkbox"/> <input type="checkbox"/>	NO
COMPANY			VASSILIAS S.A. Keletseki 8, 11145, Athens ,210-8543260		

