

Rohnson[®]

Instructions Manual

Table Blender R-5343

Read these instructions for use carefully before using the appliance and save them for further reference.

IMPORTANT CAUTION

- Check if the voltage indicated on the base of the appliance corresponds to the local mains voltage before you connect the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use the appliance when the main cord, the plug, or other components are damaged.
- Make sure all parts are correctly mounted before you switch on the appliance.
- Do not remove the pulp container when the appliance is in operation.
- Do not touch the small cutting blades in the blades in the base of the filter.
- Always unplug the appliance after use.
- If the supply cord is damaged, must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- The water temperature should not be over 60°C when cleaning the unit.
- Do not run this unit long-time, otherwise the inner parts will be damaged.
- Do not put the whole or parts of the body into the water.
- Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.

GENERAL DESCRIPTION

1. Measuring cap
2. Lid
3. Glass jug
4. Stirring blade base
5. Stirring cup base
- 6-7. Motor base
8. Touch panel
9. Body
10. Bottom



BEFORE FIRST USE

- All parts of the blender are to be thoroughly cleaned before being used for the first time.
- Connect the device to the main supply.

INSTRUCTION FOR USE

1. Check the switch knob on the "0" bit pointer position.
2. Put the motor base, and turn the button clockwise
3. Place the foodstuff you wish to process into the cup.
4. Put the lid on the cup and close it securely. Place the measuring cap into the hole in the lid.
5. Switch on the motor base:

Speed setting Use



1. Stepless Variable Speed (Rotary Switch): The first gear, power on; and turn right, the blue light will be brighter, and the speed will be faster
2. Pulse function: Press and hold to work, let go to stop.
3. Milkshake-Smoothie button: Work for 1s, stop 1s, 10 times (for more solid consistency-for mixing liquids and solid foodstuffs)
4. Ice-crushing function: Work for one minute, the speed will grow fast(short, powerful impulse movements)
5. Auto-cleaning: Work for 2s, Stop 2s, 10 times, work stops after 40s.(Easy to clean)

(The switch does not permanently engage in the "P" setting. You have to hold the switch in the "P" setting or push it repeatedly.)

Note: Operate the motor for a maximum of 2 minutes or alternating 2 minutes on, then 2 minutes off -to prevent overheating or consequent damage.

INSTRUCTION FOR CLEANING

- ❖ The appliance is easier to clean if you do so immediately after use.
 - ❖ Do not use abrasive cleaning agents, scourers, acetone, alcohol etc. to clean the appliance.
1. Switch the appliance off, remove the plug from the wall socket and wait until the blade has stopped running.
 2. Turn the blender cup to loosen counter-clockwise.
 3. Clean these parts with the cleaning brush in warm water with some washing-up liquid and rinse them under the tap.
 4. Clean the motor unit with a damp cloth.

Never immerse the motor unit in water or rinse it under the tap.

Technical Specifications:

Rated Voltage	AC220-240V
Rated Power	1500W
Rated Frequency	50/60Hz

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

