

Rohnson®

INSTRUCTION MANUAL Dehumidifier R-9005



Please keep this manual carefully for further reference!

Thank you for selecting our dehumidifier. Be sure to read this manual carefully before using it. Any questions, please contact the professional service for help.

INTENDED FOR USE

The dehumidifier is the solution to moisture problems such as closet, bedroom, storage, bathroom, wardrobes, caravans etc. It also helps eliminate musty odors and prevent mold growth. It's lightweight and easy to carry where you need it most. Dehumidification and improvement of your home environment.

Note:

Before using it for the first time, check if the voltage you are using matches the required nameplate of the product.

This product is strictly prohibited in an environment with flammable and explosive materials. When leaving or not in use for a long time, please make sure to unplug the unit, unplug the power.

Power failure or moving should ensure that the machine and power are disconnected.

Check the power cord and plug for damage before use.

Do not bend or pull the cable to avoid poor contact.

Do not block the air inlet and outlet when using the dehumidifier to avoid poor air evaporation, which will result in high internal temperature. Do not pull the plug with wet hands, there is a risk of electric shock. When the machine is working, do not use a thin rod, wire to pull out the inside of the machine to avoid failure or danger.

Place the product in an unknown place where children cannot touch. Do not use it in low temperature, dusty or volatile parts such as acid and alkali oil. Do not climb or sit on the dehumidifier, otherwise the device may be deformed. Do not let the dehumidifier blow directly on plants or animals, otherwise it may cause adverse effects.

Do not block the air inlet and outlet of the dehumidifier, otherwise the performance of the dehumidifier may be reduced or malfunction may occur.

Do not drag the machine on the carpet, otherwise there is a risk of it tipping over.

Do not place the dehumidifier against obstacles or walls. There must be at least 20 cm of space around it and at least 50 cm of space above the air outlet. Place the dehumidifier on a stable flat ground, otherwise the use result may

to be affected. Clean the dehumidifier's air filter often. A dirty and clogged filter can reduce the effectiveness of the dehumidifier.

The dehumidifier can achieve its best performance when used in a relatively closed effective space. Close doors, windows and other ventilation equipment when using it.

Warning:

To prevent fire, explosion or injury, do not use the dehumidifier when flammable or corrosive gases may be present nearby.

Do not place the dehumidifier near a heat source, otherwise it may cause device deformation or fire.

Do not repair, disassemble, modify or clean internal components without authorization. Improper handling may result in water leakage, electric shock, fire, etc. When repairs are required, contact the after-sales service. Do not put your fingers, sticks or other objects into the air inlet or outlet, otherwise damage or damage to the product or even injury may occur. Do not use the dehumidifier or outlet or unplug the power cord when your hands are wet to avoid electric shock.

Do not clean the dehumidifier directly with water and do not use the dehumidifier in places where it may be exposed to water, otherwise electric shock or fire may occur. Do not place water containers such as vases etc. in the dehumidifier, otherwise it may cause electric shock or fire.

Do not enter standby mode directly by connecting or disconnecting the power cord, otherwise electric shock or fire may occur.

Do not replace or connect the power cord without authorization. If the power cord is damaged, it must be replaced by professionals from the manufacturer, maintenance department or similar departments in order to avoid danger. If you find any abnormality (such as burning smell, etc.), immediately cut off the power supply and call the service hotline to find a solution. Continued use under these conditions may cause damage, electric shock or fire. When cleaning the

dehumidifier, turn it off and disconnect

PARTS OF DEHUMIDIFIER



1. **ON/OFF button**
2. **Light button**
3. **Sleep mode**
4. **Timer button**
5. **Specified time**
6. **Control panel**
7. **Water level and ambient lightening**
8. **Filter holder**
9. **Aroma cotton pad**
10. **Carbon filter**
11. **Air outlet**
12. **Air inlet**
13. **Water tank**
14. **Water inlet**

FUNCTION DISCRIPTION



On/Off

After you connect the power, the dehumidifier will make a "Ding" sound, the display will light up for a while and then dim, indicating that the machine is in standby mode.

Touching the switch button will cause the machine to start working, default to strong mode and automatically turn on the colorful atmosphere light. At the same time, a ring of blue LED lights will also light up around the screen.



Light

Touch the light button to display a certain color of the ambient light in the water tank, touch it again to turn off the ambient light and blue light around the screen. Touch it again to turn on the 7-color gradation ambient light and it will automatically cycle through the colors.



Touch the sleep button to enter sleep mode. At this time, all buttons on the touch screen will be disabled and only the sleep button will be slightly illuminated. The sound of the machine will be reduced and it will run at a low speed. Touch any button again to return to powerful mode.



Touch the timer button to set the timer for the dehumidifier. With each touch, the right side of the button will light up sequentially with 8 hours, 16 hours and 24 hours. When the timer reaches the set time, the machine will turn off automatically.

Filter holder

1. The filter holder on the side of the dehumidifier can be activated by pressing it and it will come out. PP material oil lock inside can protect the life of the machine. 2. You only need to add 2 drops (0.1ml) of essential oil each time to prevent the oil from flowing and damaging the machine.

3. Carbon filter cannot be washed. It should be cleaned with air (no water) to prevent it from being blocked. For reuse or replaced every 12 months to ensure clean air. (You can also contact us to purchase accessories).



Safe auto-off function When the dehumidifier is in operation and the water level reaches the maximum, the lower LED will turn red and emit a buzzer reminder, the fan and condenser will stop working, and the display will enter in power off state. To continue using the dehumidifier, remove the water tank and empty its interior. Then put it back as shown in the picture.



Note: When wiping the air outlet, there should be no water drops inside the machine.

1. Be sure to turn off the dehumidifier and disconnect the power supply before cleaning.
2. Do not immerse the dehumidifier in water or any liquid.
3. Do not use abrasive, corrosive or flammable cleaning agents (such as bleach or alcohol) to clean any part of the dehumidifier.
4. Clean the air inlet outlet, wipe with a neutral detergent and a soft cotton cloth

5. Remove the water tank, open the water tank cover and rinse the cover/tank with water.

CLEANING AND MAINTENANCE

Before cleaning and maintenance, remove the plug from the socket. Wipe the device shell with a soft damp cloth, do not use abrasive and re-solvent, otherwise the device will be damaged.

SPECIFICATIONS

MODEL	R-9005
DEHUMIDIFICATION (ml/h)	750ml/24h
RATED POWER (W)	60 W
RATED VOLTAGE (V)	110-240 V
PRODUCT SIZE (cm)	205x158x355 mm
NET/GROSS WEIGHT	2,3/2,9kg

TROUBLESHOOTING

Problem	Possible cause	Solution
The red LED first flashes red when the power is connected	The water tank is full	Empty the water tank and put is in the right place
	The float is jamming	Press the float
The dehumidifier doesn't work	The power supply is interrupted	Check that the adapter is connected
	The socket is loose	Check the power socket and the power cord, make sure they are connected well
	The air outlet is blocked	Maintain a minimum distance of at least 10 cm around the dehumidifier when the unit is operating

DISPOSAL



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.