

Rohnson[®]

INNOVATE FOR LIFE



Thank you for buying a Rohnson cordless stick vacuum cleaner with digital brushless motor (BLDC)



MAMBA compact

** Scan with your phone or QR reader to find out more about your machine

SAFETY INSTRUCTIONS

The vacuum cleaner is specially used for household purpose, please do not use it for commercial or other purposes.

1. Please don't use the vacuum cleaner to suck detergent, kerosene, glass waste, needles, cigarette ash, moisturized dust, sewage, matches, similar articles or any liquid.
2. Please do not use the vacuum cleaner to suck cement, gypsum powder, wall power and similar small particles, or toy, paper filler and other larger objects, which can cause vacuum cleaner clogging, motor burnout and another fault.
3. Please do not use the vacuum cleaner near fire source and other high temperature places.
4. When the vacuum cleaner is used, please pay attention to install HEPA properly before operating the unit.
5. When the vacuum cleaner is used, please note that the suction inlet cannot be clogged, otherwise motor failure may be caused.
6. Please do not dump or splash water or other liquid into the machine, to avoid short-circuit and burn-out of machine.
7. When cleaning the vacuum cleaner filters, please remove and wash them with water **if recommended by the manufacturer**; when you need to use them, please install the dried filters into the vacuum cleaner. Do not use the wet filters, otherwise it may burn out the machine due to the short-circuit.
8. Please use dry cloth for cleaning vacuum cleaner, do not use gasoline, banana oil etc. otherwise shell cracking or fading will be caused. Please do not use and store the machine in extremely adverse conditions, such as extreme temperature. Use the vacuum cleaner in room temperature of 5°C~ 40°C. Please store it in a cool and dry place. Sunlight exposure for long time should be prohibited.
9. Make sure that the mains voltage matches the voltage stated on the rating label of the appliance and that the outlet is grounded.
10. Do not use the device if it has been dropped or if there are any visible signs of damage.
11. Do not try to repair the appliance by yourself. Contact our official technical support service.
12. Do not use any accessory that has not been recommended by the manufacturer, as they might cause injuries or damage.
13. Turn off and unplug the appliance from the mains supply when it is not going to be used for a long period of time, before cleaning or repairing, before attaching components and before removing the battery.
14. Never modify the charger in any way.
15. Do not use any battery that has not been provided with the original product.
16. The appliance is not intended to be used by children under the age of 12. It can be used by children over the age of 12, as long as they are given continuous supervision.
17. This appliance is not intended to be used by persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge unless they have been given supervision or instruction concerning the use of the appliance in a safe way by a person responsible for their safety and understand the hazards involved.
18. Supervise young children to make sure that they do not play with the appliance. Close supervision is necessary when the appliance is being used by or near children.

BATTERY INSTRUCTIONS


-This appliance includes Li-ion batteries, do not incinerate or expose them to high temperature, as they may explode.

-Leaks from the battery or battery cells can occur under extreme conditions. Do not touch any liquid that leaks from the battery. If the liquid gets into contact with skin, wash immediately with soap and water. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes and seek medical attention. Wear gloves to handle the battery and dispose of immediately in accordance with local regulations.

-Avoid contact between the battery and small metallic objects such as paper clips, coins, keys, nails or screws.

-Before a new battery is used or the battery is used for the first time after long-term storage, fully charge the battery. When the device is stored and not used for long periods of time, ensure that the battery pack is fully charged and ensure that the battery is charged and discharged at least once every three months.

PRODUCT COMPONENTS

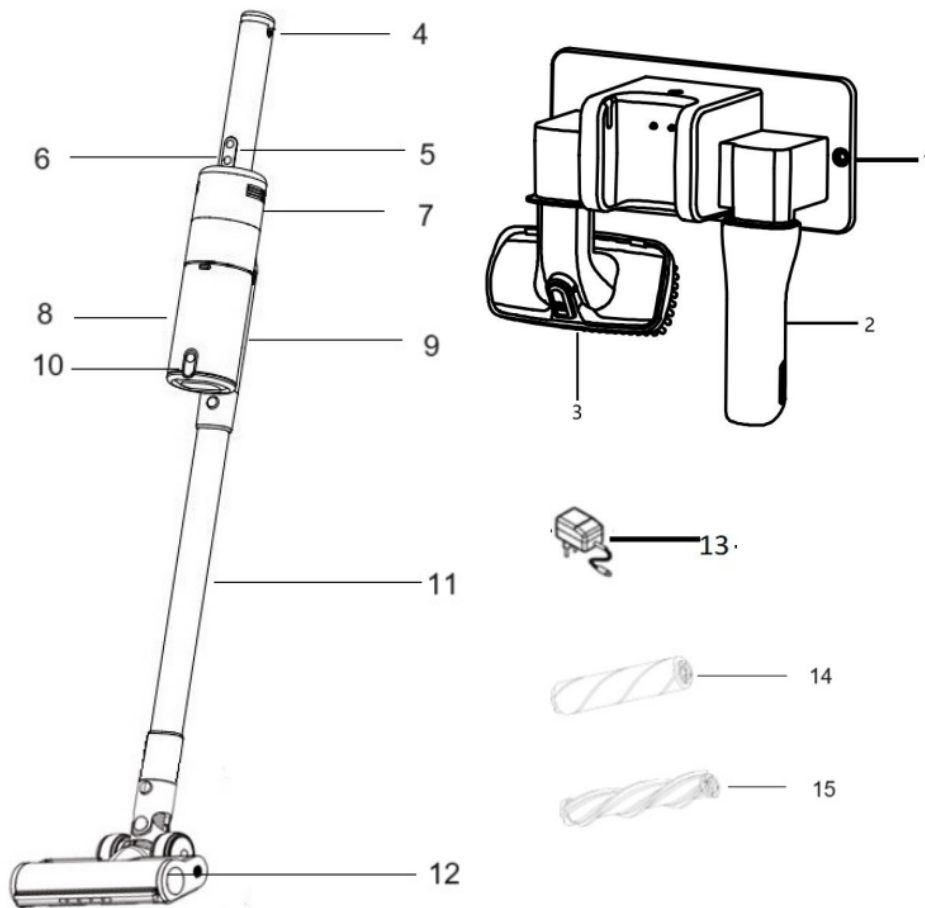

1. Wall hanger (rechargeable)
2. Flat nozzle
3. 2 in 1 upholstery nozzle for sofas and pet hairs
4. Battery pack release button
5. On/Off button
6. Speed button
7. Air outlet
8. Dust cup
9. Dust cup release button
10. Dust cup cover release button
11. Conductive aluminum tube
12. Electric floor brush
13. Adapter
14. Soft roller for floors
15. Bristle roller for carpets

CHARGING THE BATTERY

The vacuum is powered by the built-in lithium battery. Before first use, charge the battery for at least 4.5-5hours.

You can charge the battery in two ways - see below Method 1 & Method 2

The vacuum cannot work while charging.

The vacuum cannot be charged when the ambient temperature is below 10°C/50°F or above 45°C/113°F.

Charging Methods

Method 1:

The product can be charged on the storage wall-mount. Turn off the cordless vacuum cleaner. Connect the adapter to the charging port on the main unit like image A. below.


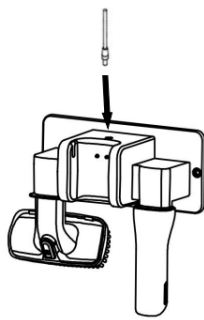


image A

The battery indicator display will flash and illuminate one by one. Once the battery is fully charged, the battery indicator display will extinguish.

Warning: Do not use any mains power adaptor other than that supplied, as using an alternative will increase the risk of injury and/or damage to main product.

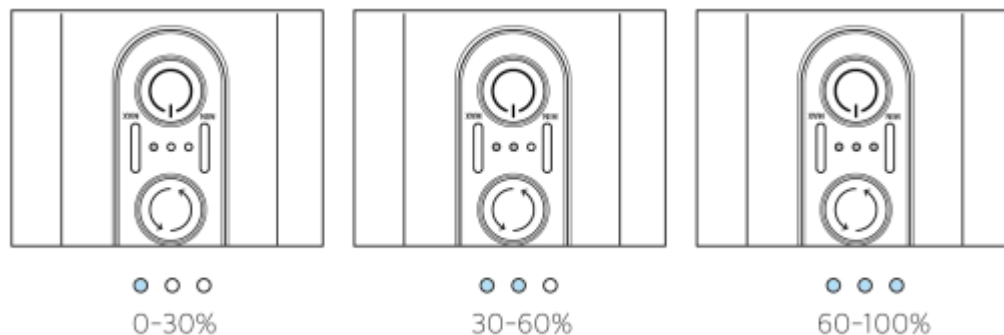

Method 2:

(a) Connect the adapter to the charging port on the main unit like image B below.

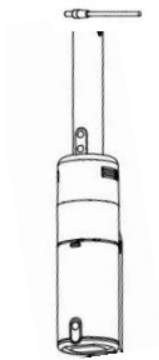



image B

NOTE: Only charge with the provided adapter.

ASSEMBLING / DISASSEMBLING


1. Install the battery pack.

 Fit the battery pack into the main body base until it clicks into the position. If need to remove the battery pack, hold the main body, press the release knob and remove it.



2. Install the aluminum tube.

 
Fit the tube into the main body's air inlet until it clicks into the position. If need to remove the tube, hold the main body, press the release knob and remove the tube.



3. Install the motorized floor brush or cleaning accessory you prefer.

Fit the motorized floor brush or any cleaning accessory on the tube until it clicks into the position. If need to remove the brush or accessory, hold the

aluminum tube, press the flood brush or accessory release knob and remove the brush or accessort from the tube.

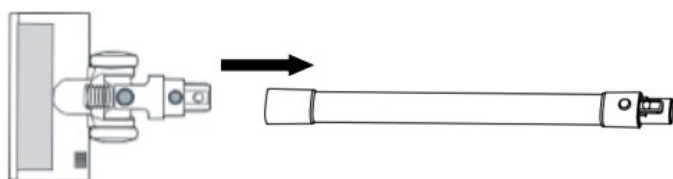

NOTE: Always remove the plug from power socket before fitting or removing accessories!

OPERATION METHOD

Before first use, ensure the vacuum cleaner has been charged for at least 4.5-5hours.

1. Press the switch button, the machine will start to work. Press the button again to shut down the machine.

Note: Battery indicator light represents battery capacity and will illuminate during use. The indicator light will extinguish one at a time as the battery runs out.

Warning: Do not use the Cordless Vacuum cleaner without the removable filter or if dust bin is not in position.

2. You can choose between the different suction power by touching the speed control button.

Touch once for low suction level	(runtime up to 35 min with the use of motorized brush)
Touch twice for high suction level	(runtime up to 12 min)

When the machine is working at any suction, press the ON/OFF button, the machine will stop working.

EN


INSTALLATION

Hold the charging wall mount against the wall through the two fixing screw holes and fix it onto the wall with screws, and then hang the vacuum cleaner on the wall.

Warning!

- Please make sure there is no gas, water or electrical cables and wires behind the mounting area.

- To avoid the dock dropping down, please make sure it must be installed firmly.

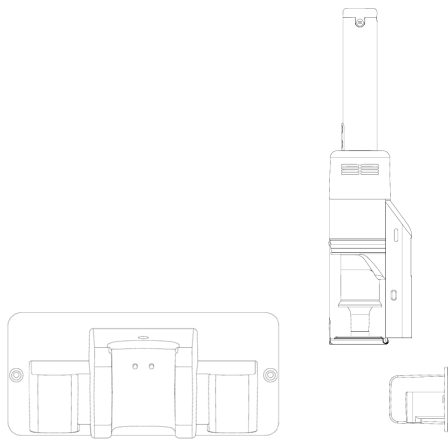


CLEANING AND MAINTANANCE

When the filters are blocked due to excessive dust, they must be cleaned and if necessary, they can also be replaced. To ensure maximum efficiency, it is suggested to clean the filters regularly (at least twice a month) and to replace the filters at least once a year. Both cleaning and replacement depend on use. More frequent cleaning may be required when vacuuming fine dust or using the machine intensively.

Clean the dust cup

Caution! Turn off the vacuum before cleaning it.

If the dust cup is filled with dust, the vacuum may stop to prevent overheating. Clean the dust cup before it fills to the MAX line.

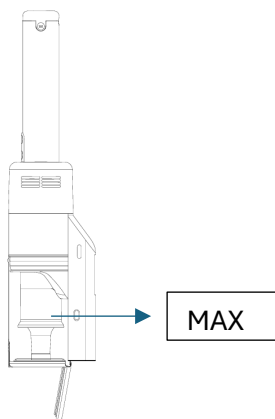

EN

Clean the filters


1. Press the dust cup release button to release the dust cup. (image A)
2. Turn the inlet HEPA filter clockwise to release it. (image A)
3. Pull out the metal filter compartment.

4. Turn the outlet HEPA filter anti clockwise to release it. (image B)
5. Shake off debris by tapping the filters against your trash container
6. Wash the filters with cold water only, under a running tap. Repeat washing the filter until clean water runs. Do not immerse into water.
7. Tap the filter to remove any excess water and leave to dry completely. Allow the filters to dry completely in a dry area with good air circulation for at least 24 hours, away from direct sunlight, heat sources like heating appliances etc.

Make sure the filters are completely dry before installing them.

CAUTION:

- Do not clean the filters in a washing machine.
- Do not use a hair dryer to dry them.
- Never use the appliance without filters.

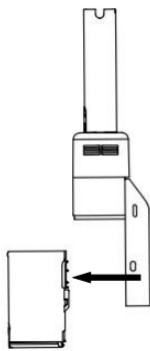

Release dust cup assembly

 
 


image A

Clean the inlet HEPA filter


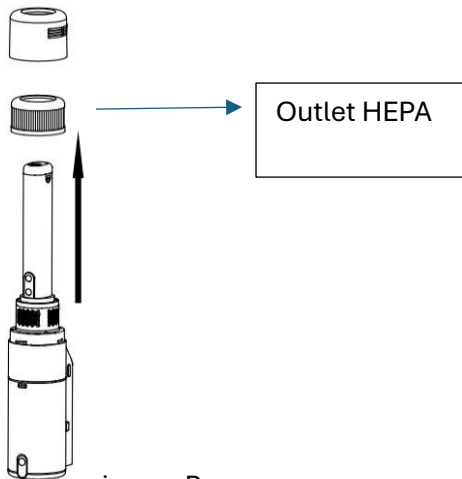


image B

Clean the motorized floor brush

1. Turn off the vacuum, press the floor brush release button to remove the floor brush from the metal tube.

2. Press the rolling brush release button to release the rolling brush locking strip.
3. Take out the rolling brush locking strip and lift the rolling brush to remove.
4. Clean the rolling brush using scissors or other tools, rinse and then air-dry the rolling brush.
5. Reinstall the rolling brush by inserting the fixed protruding end first, then clicking into place.
6. Push the rolling brush locking strip in until you hear a click.

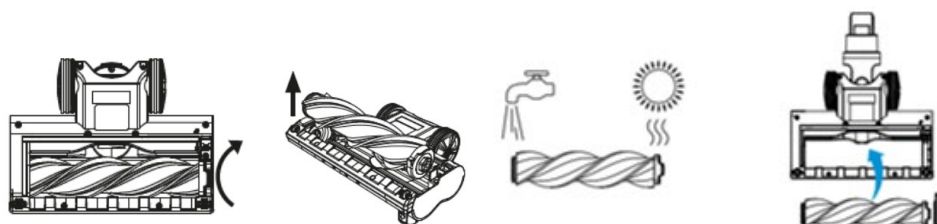

PRECAUTIONARY MEASURES

1. If the suction part is blocked, please turn off the vacuum cleaner immediately. Please remove the blockage first before you use it again.
2. Do not operate the vacuum cleaner near devices that can generate heat like heaters, radiators or cigarette butts.
3. Before you start using the vacuum cleaner, please remove large or sharp objects from floor in order to avoid damage. Do not use it to clean flammable items such as gasoline and cigarettes.

TROUBLESHOOTING

Switch off the appliance and disconnect the mains plug before addressing any faults!
Failure to do so may result in injury or electric shock.

Problem	Possible causes	Solution
Appliance is not working	Battery is empty	Charge the battery
	Filters are dirty	Clean the filters, replace the HEPA filter if necessary
	Brush roller is blocked	Clean the brush roller and remove debris such as hair and fibers if necessary.
Battery will not charge	Appliance or charging station is not correctly connected to a power socket	Connect the mains adaptor correctly to a functioning power socket
	Contact with charging station has not been established	Hang the hand-held appliance correctly in the charging station
Suction power decreases	Suction opening on the container is blocked	Clean the suction opening on the hand-held appliance and check the suction tube for any dirt.
	Dust container is full	Empty the dust container
	Filters are dirty	Clean the filters, replace the HEPA filter if necessary
	Brush roller is blocked	Clean the brush roller and remove debris such as hair and fibers if necessary.

Vacuum is not picking up debris. No suction or light suction.	Dust box may be full	Empty the dust container.
	Check for blockages	Clear crevice tool nozzle and floor brush from blockages; remove any string, hair etc that may be wrapped around the rolling brush Clear connection between the main unit and metal tube from blockages Clear any debris from metal tube
	Check filters to see if they need cleaning.	Follow instructions for rinsing and completely airdrying the filters before reassembling.
Vacuum turns off on its own.	Battery is low	Check the battery indicator lights and recharge if needed.
	Check for blockages	Empty the dust container and clean the filters. Check the metal tube, accessories and openings and remove any blockages.
	Machine is overheated	Allow the main unit of the vacuum to cool for at least for 4 minutes and restart the vacuum
Filter cannot be inserted correctly	Filter not fitting properly in slot	Check filter and fitting are correct

TECHNICAL SPECIFICATIONS:

MODEL: Rohson mamba compact M6

BATTERY: Li-Ion 18.5V, 2200mAh

POWER: 215W

DIGITAL MOTOR (BLDC motor)



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection center or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.