

Rohnson[®]

Instructions Manual

Toaster R-2210, R-2215, R-2220 Nostalgia



Please read the manual carefully and keep it well for further reference

IMPORTANT SAFEGUARDS

When using electrical appliances basic safety precautions should always be followed including the following:


1. Read all the instructions.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
3. Do not touch hot surfaces. Use handles or Press key or knobs only.
4. To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
6. Children should be supervised to ensure that they do not play with the appliance.
7. Unplug unit from outlet when not in use and before cleaning. Allow it to cool before putting on or taking off parts.
8. Allow the unit to cool completely before cleaning or storing.
9. Do not operate any appliance with a damaged cord or plug, or in an abnormal state. If its main cord is damaged, it must be replaced by the manufacturer, the nearest service agent, or a qualified person.
10. Do not let the cord hang over the edge of table or counter or touch hot surface.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Do not use the appliance for other than its intended use.
13. Oversized food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.
14. Bread may burn; therefore, toasters must not be used near or below curtains and other combustible materials, and they must be watched.
15. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
16. Use the appliance on a level and stable work surface.
17. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
18. Don't attempt to dislodge food when the toaster is in operation.
19. Be sure to take the bread out carefully after toasting so as to avoid injuries.
20. Don't use the appliance outdoors.
21. This appliance is intended to be used in household and similar applications

such as:

- Staff kitchen areas in shops, offices and other working environments;
 - Farm houses.
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
- Save these instructions.

PRODUCT INTRODUCTION

CONTROL PANEL:

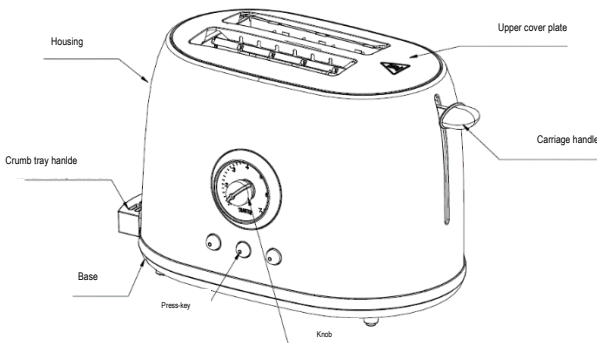

FOR THE FIRST USE

As there is manufacturing residue or oil remaining in the toaster or heat element, it usually emits odor for the first use. It is normal and will not occur after several times use, for the first use it is suggested to operate according to the below steps, except without bread. Then let the toaster cool down and begin toasting the first slice.

OPERATION

1. Put the bread slice into the bread slot, it can be inserted two slices at most every time.

Note: Make sure the crumb tray is completely positioned in place before using.

2. Plug the power cord into the outlet.

3. Turn the color control knob to your desired color. The lowest is set white and the highest is dark. The middle position can toast the bread to golden color.

4. Press carriage handle down vertically until it is positioned in place, the indicator of Cancel button will be illuminated, and toast will begin at once. Once the bread has been toasted to the preset color, the carriage handle will automatically spring up. You can uplift the carriage handle a little to remove the bread readily.

Note: Only the power supply is switching on, the carriage handle can rest on the

bottom of slot.

5. During the toasting process, you may observe the toasting color. If it is satisfying, you press the **Cancel** button to cancel the operation at any time.
6. Once the bread has been toasted to the preset color, the carriage handle will automatically spring up, also you can uplift the carriage handle a little to remove the bread readily.
7. If the bread has been taken out from refrigerator, press “**Defrost**” button and the lamp beside it will be illuminated, in this mode it will be toasted to your desired color.
8. If you want to reheat the cold toasted bread, press the “**Reheat**” button and the lamp beside it will be illuminated. In this mode toasting time is fixed, so long as time is running over, the carriage handle will automatically spring up and end up the reheating process.

CAUTION

1. If toaster starts to smoke, Press **Cancel** to stop toasting immediately.
2. Remove all protective wrapping prior to placing the toaster in use.
3. Avoid toasting the food with extremely runny ingredients such as butter.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first, Be sure not to damage the internal mechanism or heating elements when removing bread.
5. The bread slot is only applicable for toasting regular bread slices. Other types, like the irregular bread or round bread, you can not toast it in the Bread slot.
6. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
7. Keep the appliance and its cord out of reach of child less than 8 years.
8. The outer surface may get hot when the appliance is operating.
9. The appliances are not intended to be operated by means of an external timer or separate remote-control system.

CLEANING AND MAINTENANCE

1. Disconnect from AC outlet before cleaning.
2. Wipe the outside with soft dry cloth after toaster cools down, never use metal polish.
3. Pull out crumb tray on bottom of toaster and empty it. If the toaster is used frequently, accumulated bread crumbs should removed at least once a week.

Make sure the crumb tray is completely closed before using the toaster again.

4. When not use or storage, the power cord may be wound under the bottom of toaster.
5. Don't put the toaster in water or any other liquid.

CRUMBS

Remove crumbs frequently. They could cause a fire hazard.

Unplug the toaster and let it cool down fully. Remove and empty the crumb tray. Wipe it with a damp cloth, dry it, then slide it back into the toaster.

Don't use the toaster unless the crumb tray is in place and closed.

TECHNICAL CHARACTERISTICS

Rated voltage range	220–240 V
Rated frequency	50-60Hz
Rated power	850W

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enabling the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

