

*Rohinson*<sup>®</sup>

Instructions Manual  
**Digital Toaster R-222T**



**Please read the manual carefully and keep it well for further reference.**

## **IMPORTANT SAFEGUARDS**



Follow basic safety precautions, including:

1. Don't put your toaster in water. Don't use it in a bathroom or near water, and don't use it outdoors.
2. The toaster should only be used by or under the supervision of a responsible adult.
3. Position the toaster upright on a firm, level, heat-resistant surface, near a power socket and out of reach of children.
4. Don't use it near or below curtains or other combustible materials and watch it, as bread if overcooked can catch fire.
5. The area round the toasting slot will get hot during use — don't touch!
6. Route the mains lead so it doesn't overhang and can't be caught accidentally.
7. Don't let the toasting slot become covered during toasting, or while it's hot.
8. If bread gets jammed, unplug the toaster, let it cool, and carefully remove the bread. Don't use anything sharp, or you'll damage the elements.
9. Don't toast buttered items or make toasted sandwiches in the toaster.
10. Don't use torn, curled, or misshapen slices, or you may jam the toaster.
11. Unplug after use, and let it cool down before cleaning and storing away.
12. Clean the crumb out of your toaster frequently, to avoid a build-up of crumb. This is unhygienic and could cause a fire hazard.
13. Don't use the toaster unless the crumb tray is closed.
14. Keep the toaster and mains lead away from the hotplates, hobs and burners.
15. Don't use toaster for anything other than toasting bread products.
16. Don't use the toaster if it's damaged or malfunctions. If the mains lead is damaged, the toaster must be returned, in order to avoid hazard.
17. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
18. Keep the appliance and its cord out of reach of children less than 8 years.
19. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

20. This appliance is not intended to be operated by means of an external timer or separate remote-control system.
21. When the appliance is not in use and before cleaning, unplug the appliance from the outlet firstly.
22. To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
23. The appliance is only intended for the purpose described in user manual. Do not use appliance or any part of the appliance out of the intended use to avoid risk.

**Household Use Only**

**PRODUCT IMAGE**

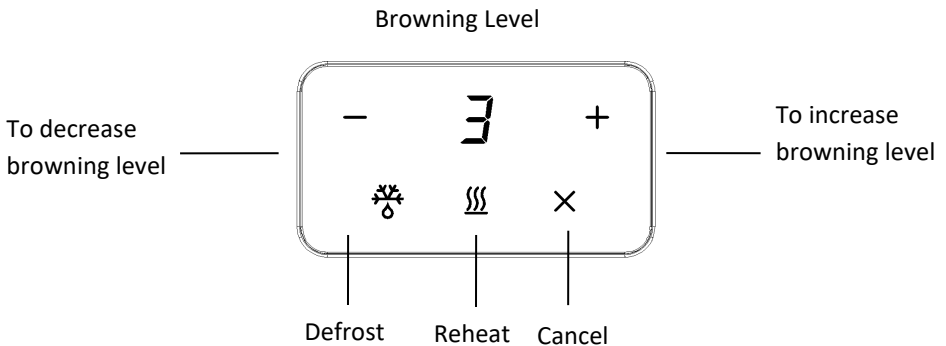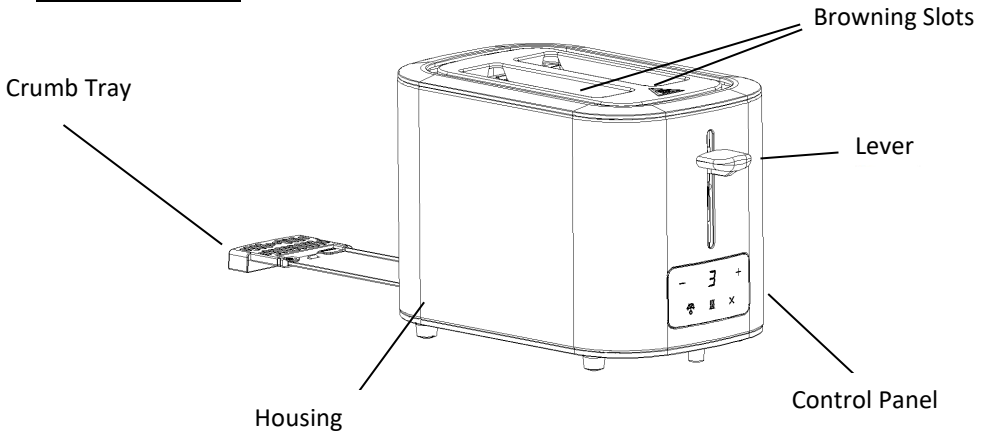

## **HOW TO USE THE UNIT**

This digital toaster is with touch control. Use your fingers to gently touch the icons in order to:

- 1) increase or decrease the browning levels;
- 2) Select one of the functions CANCEL/REHEAT/DEFROST

### **Memory function of browning level**

This digital toaster has a memory function. It automatically “remembers” the browning level which is completed the last time it was used. This saves the effort of setting the favorite browning level every time. If the browning is terminated by the user CANCELLING the browning, the browning level at that time is not remembered.

### **Making toast**

 
1. Put the toaster upright on a firm, level, heat-resistant surface, clear of curtains and other combustible materials. Don't put it on or near anything that could be damaged even by moderate sources of heat.
2. Plug it into a power socket (if necessary, switch the socket on) with the mains voltage of 220-240V.
3. Put the bread centrally into the toasting slot (maximum thickness 20mm)
4. Press the bread carriage handle fully down-it won't lock down unless the toaster is connected to the electricity supply. When the light in the control panel is on, here the heating elements will heat up.
5. Use your fingers to gently touch the icons to increase or decrease the browning levels. The browning level number will indicate the level chosen. The higher the number of choice, the darker the toast.
6. When the browning is done, the toast will pop up and the elements will turn off.

### **First Use**

Turn the toaster on as mentioned. Set the browning level to maximum level (Level 6) , and operate the toaster without bread, to cure the new elements. This may smell a bit, but it's nothing to worry about. Ensure the room is well ventilated.

### **Defrost Button**


Put the frozen bread into the toasting slot, lower the bread carriage handle, the toaster is switched on and the lights in the control panel will be on as well.

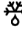Gently touch “ + “ or” - “ to set the browning level to preferred setting. Gently touch the icon DEFROST . The toasting time will be adjusted automatically to give the same browning level with unfrozen bread.

When the browning is done, the toast will pop up and the elements will turn off.


### **Reheat Button**

The time period of REHEAT function is fixed, there is no need to choose the level of browning.

Gently touch the icon REHEAT . When the reheating is done, the toast will pop up and the elements will turn off.

Use REHEAT function to only reheat plain, unbuttered toast.

### **Cancel button**

To stop the toaster before the toasting cycle has finished, gently touch the icon  to pop the toast up. The toaster is then switched off.

### **Hints and tips**

If toasting two slices, they should be of similar size, thickness and freshness.

Yesterday's bread contain less moisture, so makes a crisper toast.

Thinner bread cooks faster than fresh or thick bread, so a lower setting is suggested.

Sweet bread products (tea cakes, fruit loaf, etc.) brown much more quickly than ordinary bread, and should be toasted on a lighter setting.

### **Care and maintenance**

First — unplug the toaster and let it cool down fully. Wipe the outside with a soft damp cloth.

Don't let anything enter the slot, as this might damage the element. Don't use harsh or abrasive cleaning agents or solvents.

Don't put the toaster in water or any other liquid.

### **Crumbs**

Remove crumbs frequently. They could cause a fire hazard.

Unplug the toaster and let it cool down fully. Remove and empty the crumb tray.

Wipe it with a damp cloth, dry it, then slide it back into the toaster.

**Don't use the toaster unless the crumb tray is in place and closed.**

### **TECHNICAL CHARACTERISTICS**

Rated voltage range	220–240 V
Rated frequency	50-60Hz
Rated power	730-870W

### **IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enabling the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a

crossed-out wheeled dustbin.

