

Rohinson[®]

Instructions Manual

Sandwich Maker R-2687



**For your safety and continued enjoyment of this product
always read the instruction book carefully before using**

IMPORTANT

Read these directions for use carefully before using the appliance and save them for future reference.

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
2. Keep the appliance and its cord out of reach of children less than 8 years.
3. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
4. The appliance is not intended to be operated by means of an external timer or separate remote control system.
5. The temperature of accessible surfaces may be high when the appliance is operating the surfaces are liable to get hot during use
6. Cleaning and user maintenance shall not be made by children without supervision
7. Before connecting the appliance ensure that the voltage indication the underside of the appliance corresponds with the mains voltage in your home.
8. Connect the appliance to an earthed wall socket
9. Position the appliance so that:
 - the power cord is not hanging over the edge of the table or sink;
 - it is standing on a flat surface with sufficient free space around it.
10. Never put the power cord near to or in contact with the hot surface of the appliance.
11. Always preheat the cooking plate before starting to cook.
12. Unplug the appliance after use.
13. Avoid touching the metal parts as they become very hot.
14. Never use sharp or abrasive items in contact with the cooking plate as this will damage the nonstick surface.
15. Always clean the appliance after use.
16. First unplug and allow the appliance to cool down.
17. Never immerse the appliance into water. Avoid water running into the appliance.
18. If the mains cord of this appliance is damaged, it must only be replaced by their

- service representative, as special tools and/or parts are required.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 20. Children should be supervised to ensure that they do not play with the appliance.
 21. The appliance is not intended to be operated by means of an external timer or separate remote-control system.

BEFORE FIRST USE

Clean the baking plates with a damp cloth or sponge.

Slightly grease the baking plates with a little butter or cooking oil.

Plug in the sandwich maker and heat up the plates until the green light goes off. The sandwich maker is ready for use.

Note: When using this sandwich maker for the first time, a smoke haze may result. This is normal because of the initial heating of the internal components.

MAKING TOASTED SANDWICH

Put the plug into the wall socket. The red power light and green power light will both illuminate to show that the sandwich maker is heating.

Prepare the bread and the filling for your sandwich while the sandwich maker is pre-heating.

Wait until the green light goes off, the sandwich maker is then at the correct temperature for use.

To obtain an even golden-brown result, you can slightly butter the side of the bread in contact with the plate.

Lay the slices of bread with the buttered side on the lower cooking plate, place your filling and cover with the second slices of bread with buttered side up.

You can toast only one sandwich if you wish. For optimal result, fillings should be placed well within the sandwich slices.

Lower the upper cooking plate carefully onto the bread until the sandwich maker is tightly clamped.

Open the sandwich maker after 3-5 minutes and check whether the toasted sandwich is sufficiently 'brown'. The cooking time required to obtain crisp brown sandwiches depends on the type of bread, fillings, and your personal taste.

Use a non-metallic utensil (e.g. Wooden spatula) to remove the toasted sandwich maker. Do not use sharp or abrasive kitchen utensils.

Unplug the sandwich maker from the wall socket after use.

Note: During cooking, the green ready to cook pilot light cycles on and off to maintain the appliance at the correct temperature.

CLEANING AFTER USE:

Never use aggressive or abrasive cleaning agents and materials, as these damages] the non-sticker coating of the plates.

1. Unplug the appliance.
2. Let the appliance cool down properly in an open position.
3. First remove excess oil from the plates with a piece of kitchen paper before you clean them.
4. Use a wooden or plastic spatula to remove stick food residues (for example solidified cheese) from the cooking plates.
Do not use metal, sharp, or abrasive utensils.
5. Clean the cooking plates with a moist soft cloth or sponge.
6. Clean the outside of the appliance with a moist cloth.

Never immerse the appliance into water.

The appliance can be stored in a vertical position.

TECHNICAL SPECIFICATION

Voltage:	220-240V
Frequency	50~60Hz
Rated Power	1400W

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection center or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

