

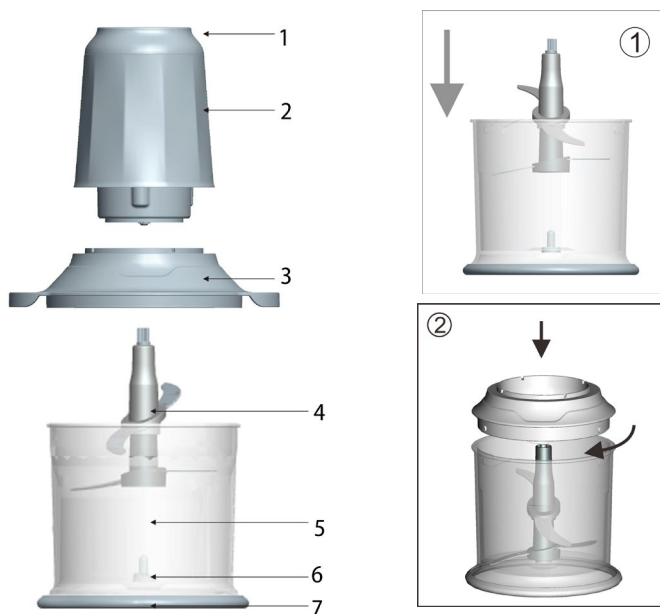
***Rohnson***<sup>®</sup>

Instructions Manual

**Chopper R-518C**



**Read carefully and keep the instruction for future reference**

**DESCRIPTION OF PARTS**

1. One speed Button/Two speed Button
2. Motor Unit
3. Lid
4. Blade
5. Bowl
6. Fixed Shaft
7. Rubber Base

## **IMPORTANT SAFEGUARDS**

When using electrical appliances, to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should always be followed, including the following:



You should respect the following safety warnings:

- ⚠ WARNING:** The blades of the knife are extremely sharp. Handle them with caution.
1. Read all instructions carefully.
  2. To protect against electric shock, do not place cord, plug or appliance in water or other liquid.
  3. Close supervision is necessary when any appliance is used by or near children.
  4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless instructions concerning use of the appliance by a person responsible for their safety.
  5. Unplug from outlet when not in use and before cleaning.
  6. Do not operate any appliance with a damaged cord or plug, in case of appliance malfunctions or if the appliance has been damaged in any manner.
  7. The use of accessory attachments not recommended by manufacturer may cause malfunctions.
  8. Do not use outdoors.
  9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
  10. Do not place the appliance on or near hot gas or electric burner, or in a heated oven.
  11. This product has been designed for domestic use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and guarantee is no more valid.
  12. Do not use your device if any part is broken.
  13. Do not put the appliance, the power cord or the plug into water or any other liquid.
  14. Make sure that the cover is securely locked in place before operating the appliance.
  15. Never place ingredients in the container by hand and while the appliance is in use.

16. The blade and discs are sharp. Handle carefully. Store out of reach of children.
17. Make sure that the cover is securely locked in place before operating the appliance.
18. If the power cord or the plug are damaged, do not use your appliance.
19. For your own safety, please use only the original accessories and spare parts which are suitable for your appliance.
20. Never remove the lid until the knife has stopped completely.
21. This appliance is designed to process small quantities. Do not exceed the quantities indicated in these instructions for use.
22. Do not use this appliance to mix glutinous food or substance.
23. Do not use the appliance for other than intended use.
24. For your safety, this appliance conforms to the appliance standards, regulations and directives of Low Voltage, Electromagnetic Compatibility, Environment, etc.
25. Children being supervised not to play with the appliance.
26. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.

## **SAVE THESE INSTRUCTIONS**

### **USING YOUR APPLIANCE**

Before first use, clean the various parts of the appliance.

### **MINCING AND BLENDING**

- Put the blade onto the fixed shaft in the bowl (Fig.1). Pour in the ingredients and lock the lid (Fig.2).
- Place the motor unit onto the assembly by turning it slightly.
- Plug in the appliance and press one speed button/two speed button, at the same time holding the appliance by the motor unit.
- At the end of preparation, release the button, unplug the appliance and wait until the blades come to a complete stop.
- Remove the motor unit, the lid and the blades to pour out the preparation.

**BABY FOOD:** To mix or blend cooked food chop the food into small pieces, add some broth (meat or vegetables) and mix the ingredients with pulses. To blend the mixed food, press the start button continuously

INGREDIENTS	QUANTITY	MAXIMUM TIME
ONIONS	200 gr	10 sec
DRIED APRICOTS	120 gr	10 sec
PLUMS	120gr	10 sec
FRUIT COMPOTE	120gr	8 sec
GARLIC	150gr	5 sec
BREAD	20 gr	10 sec
BISCUITS	20 gr	10 sec
ALMOND	100gr	7 sec 2 reps
HAZELNUTS	100 gr	7 sec 2 reps
HARD CHEESE	200 gr	7 sec 2 reps
COOKED EGGS	200gr	10 sec
MEAT	150gr	10 sec
BABY FOOD	30 gr	10 sec
PARSLEY	30gr	10 sec

**FOR FRUIT PRESERVES:**

Chop the fruits into small pieces, add some milk, water or juice and mix the ingredients with pulses. To blend the fruits, press the start button continuously until you reach the desired result.



CAUTION: Maximum time of processing should not exceed 10 seconds continuous use. In order to achieve below processing times, use the appliance with pulses and intermediate 10 seconds pauses.



**CAUTION: DO NOT OPERATE THE UNIT WHEN EMPTY.**



**CAUTION: DO NOT PUT HOT INGREDIENTS INTO THE BOWL. BEFORE FOOD PREPARATION, ALLOW FOOD TO COOL DOWN FOR A FEW MINUTES.**



CAUTION: Before you eat or serve blended food, please always check for ingredients that might have not been blended adequately.

### **CARE AND CLEANING**

- Always unplug the appliance first.
- Only use a damp sponge to clean the motor unit. Never place it in water, or under running water.
- The bowl, the blades and the lid can all be cleaned in the dishwasher (upper basket)

### **TECHNICAL SPECIFICATION**

Voltage: 220-240V~ 50/60HzMaxium Locking Power: 600W

### **IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of

household appliances separately, the product is marked with a crossed-out wheeled



dustbin