

*Rohinson*<sup>®</sup>

## Hand blender set R-5750

### Instructions Manual



Read this booklet thoroughly before using and save it for future reference.

 
 
Before using the electrical appliance, the following basic precautions should always be followed including the following:

## IMPORTANT SAFEGUARDS

1. Read all instructions.
2. Before using check and ensure that the voltage of wall outlet corresponds to the one shown on the rating plate.
3. Do not operate with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
4. If the supply cord is damaged it must be replaced by the manufacturer, an authorized service agent, or a qualified technician in order to avoid a hazard.
5. To protect against the risk of electrical shock do not put in water or other liquid.
6. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling, or cleaning.
7. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that are moved in use.
8. Do not let the cord hanging over edge of table or hot surface.
9. Do not immerse the upper part of blender into water as this would give rise to electric shock.
10. Do not put the blending rod into the dishwasher for cleaning.
11. Close supervision is necessary when appliance is being used near children or infirm persons.
12. Avoid contacting moving parts.
13. Keep hands and utensils out of container while blending, chopping or whisking to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
14. The appliance cannot be used for blending hard and dry substances, otherwise the blade could be blunted.
15. The use of accessories not recommended by the manufacturer may cause injuries to persons.
16. Do not operate the appliance for other than its intended use.
17. Appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instructions concerning use of the appliance in a safe way and understand the hazards involved.

18. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
  19. Do not allow children to use the blender without supervision.
  20. Be sure to switch off the appliance after each use of your blender. Make sure the motor stops completely before disassembling.
  21. The blades are extremely sharp, care shall be taken when handling the sharp cutting blade, empty the measuring cup and bowl during cleaning.
  22. Be careful of potential injury from misuse.
  23. Do not use it outdoors.
- Save these instructions.

## DESCRIPTION OF PARTS

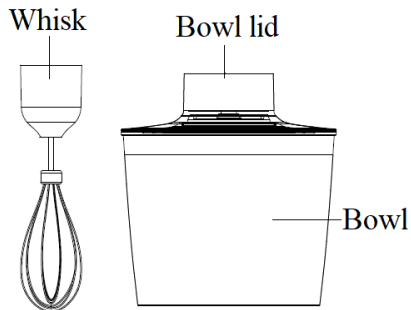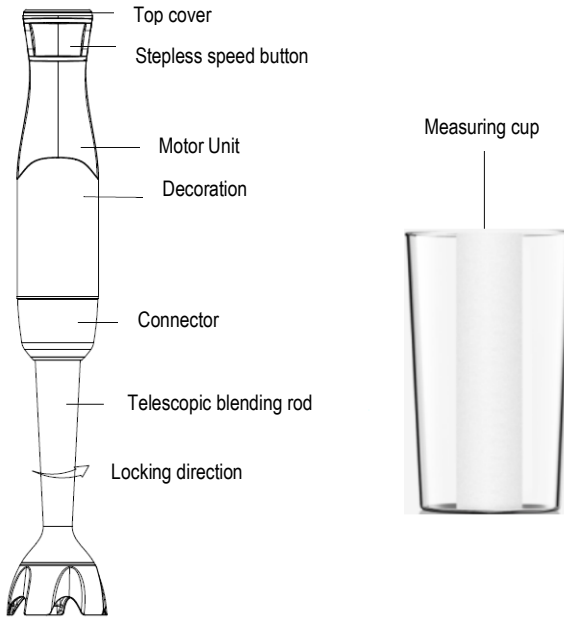

### Stepless Button Introduction

Due to the stepless button and the blade design better results are achieved. The blades are able to be retractable with a touch on the stepless button.

With this technology when the blending rod moves up, the blades are moved down towards the blending head to farther reach the food, for better blending results. Food spattering and collision are reduced while large pieces of food are blended tightly due to the upward movement of the blade.

The blending rod has a better noise and shock absorption effect, a longer service, and quieter operation.

Scratches in the kitchenware are also prevented. The black plastic protected cover reduces the scratches in the cooking pans and any sound collision when hard food is blended.

## BEFORE FIRST USE

Before the first use, clean the blender according to the section of **“QUICK CLEANING”**. The running time without load cannot exceed 15 seconds.

**CAUTION:** Blades are very sharp, handle them with care. Ensure that the hand blender is unplugged from the power outlet before assembling or removing accessories.

## HOW TO USE

**Instruction for hand-held blender:** It can be used as a blender, chopper and whisk by being attached different accessories.

### INSTRUCTION FOR BLENDER

1. To assemble the telescopic blending rod with the motor unit, turn the blending rod anticlockwise until they are tightened well. To disassemble, just turn it in an adverse direction.
2. Put the food needed to be blended into the measuring cup. Refer to the recipe suggested in the section of **“RECIPE”** below.
3. Insert the power plug into the power socket.
4. Lower the blending rod into the measuring cup loaded with food. And then press the Stepless speed button to start operating. To increase the speed, press the Stepless speed button deeper. To get the highest speed, press the Stepless speed button to its lowest position.
5. The blending rod is telescopic, so you can press the telescopic blending rod to get a better blending effect when blending.

**NOTE:** When blending, please ensure that there is no food dropping into the movable position of the telescopic blending rod, otherwise, the telescopic blending rod will not be operated smoothly because of the stuck of food. If this condition occurs, please do cleaning in time.

**CAUTION:** The maximum operation duration per time cannot exceed 1 minute, and a rest time of 10 minutes must be maintained between two consecutive cycles.

6. To stop the appliance, release the Stepless speed button.

7. After the blending is completed, disconnect the power source first, and then remove the hand blender from the measuring cup.

8. Remove the blended food from the measuring cup for serving.

 
### **INSTRUCTION FOR CHOPPER**

1. Place the bowl on a clean and level surface.

2. Install the chopping blade into the bowl when well in place (see Fig.1).

3. Put the food that needs to be chopped into the bowl. Refer to the recipe suggested in the section of “**RECIPE**” below.

4. Close the bowl lid correctly (see Fig.2).

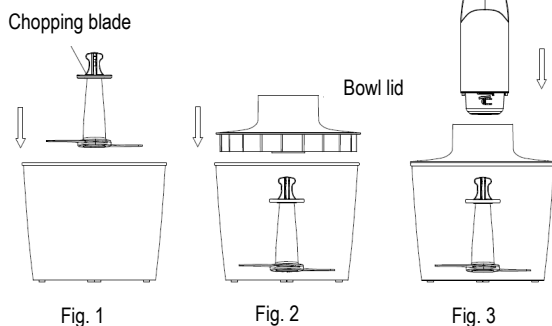

5. Insert the power plug into the power socket.

6. Insert the motor unit into the bowl and turn the motor unit clockwise to lock well (see Fig.3), and then press the Stepless speed button to start operating. To increase the speed, press the Stepless speed button deeper. To get the highest speed, press the

Stepless speed button to its lowest position.

**CAUTION:** The maximum operation duration per time cannot exceed 1 minute, and a rest time of 10 minutes must be maintained between two consecutive cycles.

7. To stop the appliance, release the Stepless speed button.
8. After the chopping is completed, disconnect the power source first, and then remove the motor unit from the bowl by turning the motor unit anti-clockwise.
9. Remove the chopped food from the bowl for serving.

### **INSTRUCTION FOR WHISK**

1. To assemble the whisk with the motor unit, turn the whisk anti-clockwise until tightened well. To disassemble, just turn it in the adverse direction.
2. Put the egg white into the measuring cup. Generally, two egg whites are enough.
3. Insert the power plug into the power socket.
4. Lower the whisk into the measuring cup loaded with egg white. And then press the Stepless speed button to start operating. To increase the speed, press the Stepless speed button deeper. To get the highest speed, press the Stepless speed button to its lowest position.

**CAUTION:** The maximum operation duration per time cannot exceed 1 minute, and a rest time of 10 minutes must be maintained between two consecutive cycles.

5. To stop the appliance, release the Stepless speed button.
6. After the whisking is completed, disconnect the power source first, and then remove the whisk from the measuring cup.
7. Remove the egg whites which have been whisked from the measuring cup for serving.

### **CLEANING AND MAINTENANCE**

1. Unplug the appliance and remove the accessory.

**NOTE:** Do not immerse the detachable blending rod of the blender in water because the lubrication on the bearings may be washed away. The blending rod cannot be put into the dishwasher for cleaning.

2. Rinse the whisk, measuring cup and bowl with water and then dry them. The measuring cup and bowl cannot be used for storing food for a long time.
3. Wash the detachable blending rod under running water, without the use of abrasive cleaner or detergents. After finishing cleaning the detachable blending rod, place it upright to empty the residual water.

4. Wipe the motor unit with a damp cloth. Never immerse it in water for cleaning as a electric shock may occur.

5. Dry the hand blender thoroughly.

**CAUTION:** Blades are very sharp, handle with care.

## **QUICK CLEANING**

Before using the hand blender for the first time or between two processing tasks, hold the hand blender and put it in the measuring cup half filled with water and turn on the hand blender to make it run for a few seconds.

## **RECIPE**

### **1. Blending strawberry**

**Ingredient:**

**Strawberry:** 100g

Milk: 300g

**Operation:** Fill the measuring cup with 100g of strawberry and 300g of milk, and then run the appliance at the highest speed for 15 seconds, and the strawberry should be blended completely.

### **2. Food preparation**

**Ingredient:**

**Cold honey:** 280g (Temperature: 3-4°C)

**Egg white:** 20g (Temperature: 23-25°C)

Put the cold honey into the bowl of chopper and then add the egg white, then process it at the highest speed for 3 seconds.



## TECHNICAL SPECIFICATIONS

Rated voltage range	220-240 V
Rated frequency	50-60 Hz
Rated maximum power input	1200 W

### IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

