

Rohnson[®]

INSTRUCTION MANUAL

Drink Shaker R-4407




Read this manual thoroughly before using and save it for future reference.

GENERAL SAFETY INSTRUCTIONS

1. Before using this Milk Shake Maker, these instructions should be carefully read to ensure that the best results are obtained.
2. Please keep these instructions; the guarantee certificate; the sales receipt; and if possible the gift box with the inner packaging.
3. Switch off the Milk Shake Maker and remove the plug from the mains supply whenever the Milk Shake Maker is not in use or whenever a disturbance occurs.
4. Close supervision is necessary if the Milk Shake Maker is to be used by children.
5. Test the Milk Shake Maker and the cable regularly for damage. If there is damage of any kind, the Milk Shake Maker should not be used. Take care to insure that the cable does not hang down.
6. Repairs to the Milk Shake Maker should only be performed by a qualified Electrician.
7. Under no circumstances must the Milk Shake Maker be placed in water or other liquid.
8. Do not use the Milk Shake Maker with damp or wet hands.
9. CAUTION : Fingers and foreign objects should not be put into the mixing cup while in operation.
The blade is sharp. Handle with care.
10. Always make sure the Milk Shake Maker is securely in place before the motor is switched on.
11. Releasing the pulse button after every use. Make sure the motor stops completely before removing the mixing cup.
12. Keep these instructions in a safe place for future reference.
13. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
14. Children should be supervised to ensure that they do not play with the appliance.

KNOW THE MILK SHAKE MAKER

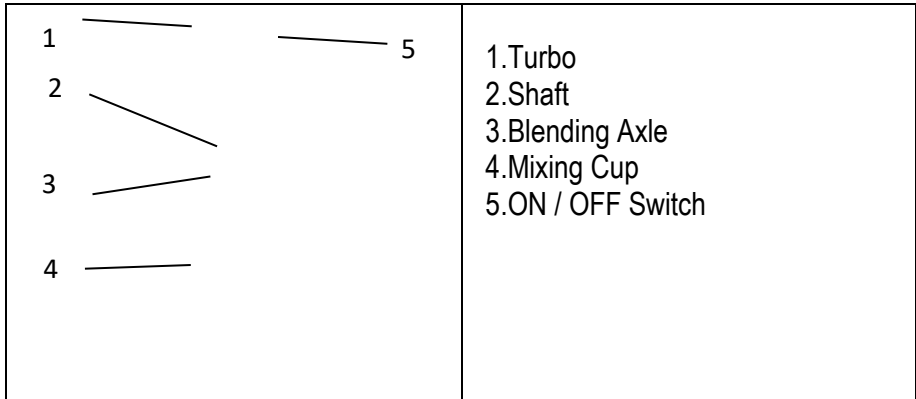

USING THE MILK SHAKE MAKER

- The switch should be on the '0' position before attaching the power plug to a suitable 220-240 VAC mains supply.
- Turn the power switch to "I" or "II" position.
- Turn the "Turbo" (1) when running which may quicken to mix.
- Pour milk into the cup provided.

Add flavoured milk shake powder and sugar (or any other ingredients that you prefer to mix).

Raise the plastic cup to the axle.

- The Milk Shake Maker should be switched on for not more than 1 minute on every operation. This will ensure the desired results.
- Turn the switch to the "0" position and releasing the pulse button and let the Milk Shake Maker cool for approximately 2 minutes.
- Always keep the Milk Shake Maker dry.

CLEANING THE MILK SHAKE MAKER

- Before cleaning, the switch must be in "0" position and releasing the pulse button and disconnect the power plug from the mains supply.
- Do not immerse the Milk Shake Maker in water or other liquids. Simply wipe with a damp cloth.
- To clean the axle, pour water into the cup and switch on for a few seconds.
- Do not store the Milk Shake Maker immediately after use. It might still be hot.
Allow to cool and then store in a safe place.

STORAGE

- Store the Milk Shake Maker after it has cooled down gradually.
- When not in use, disconnect the Milk Shake Maker and store in a dry, safe place, out of reach of children.

WARNING

The Milk Shake Maker is for domestic use only.
Always switch the Milk Shake Maker off after 2 minutes continuous use.
Wait for 2 minutes each time before operating the Milk Shake Maker again.
This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
Children should be supervised to ensure that they do not play with the appliance.

AC 220-240V~50Hz 100W



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2012/19/EU.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection center or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

